



## Front right adapter Ducato 244

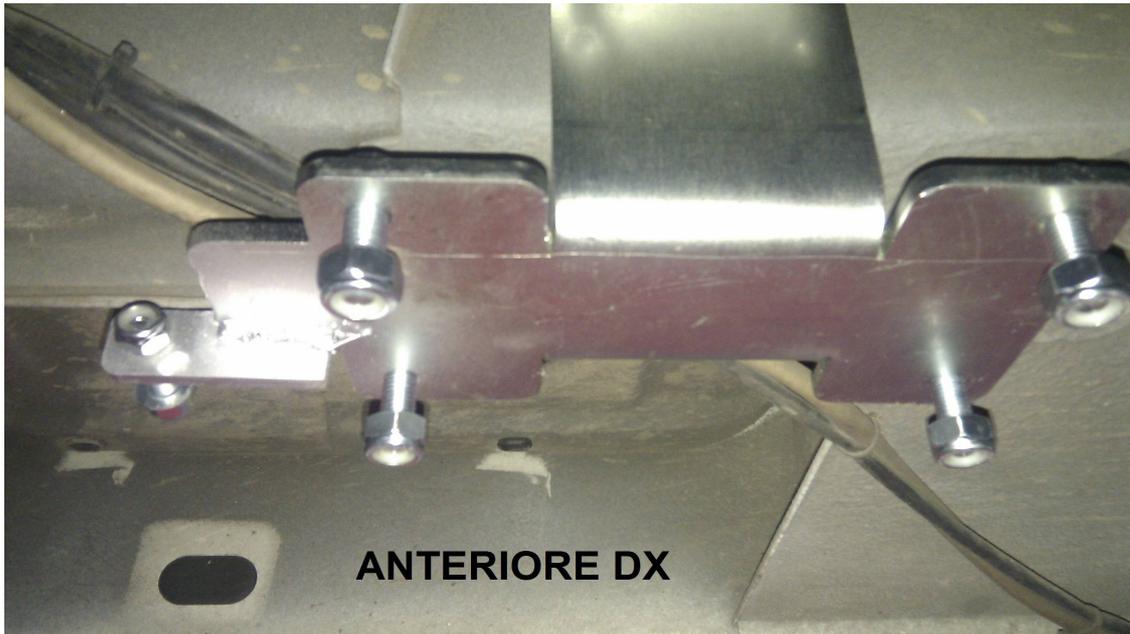

Put the adapter on the chassis, under the cabin's door.  
If necessary remove any sealing material, insert the adapter and push most frontly possible, until it touch the vertical part of the chassis.

Insert the adapter with the help of a bottle jack, then drill the 8mm hole and fit with the bolt..


Use the special plate for finish the fitting of the adapter.

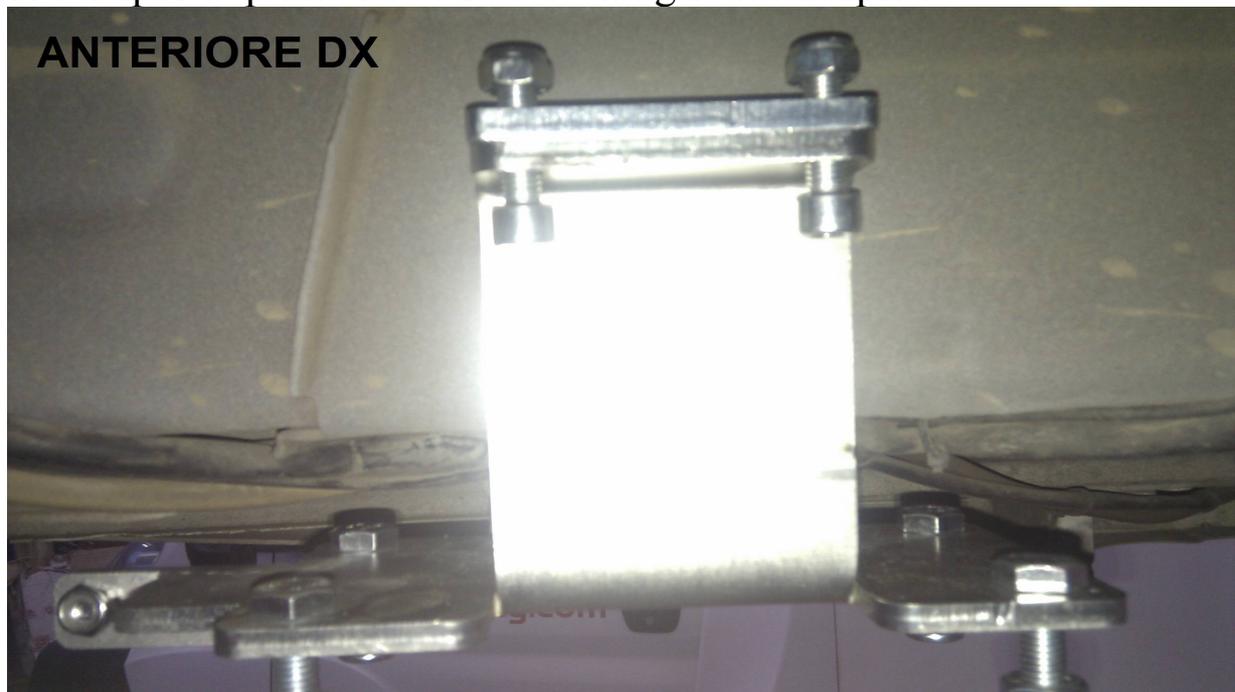

**JACK WITH ENGINE EXTERNAL AND ROTATION FRONT**

## Front Left adapter Ducato 244

Follow the same procedure of the front right adapter.

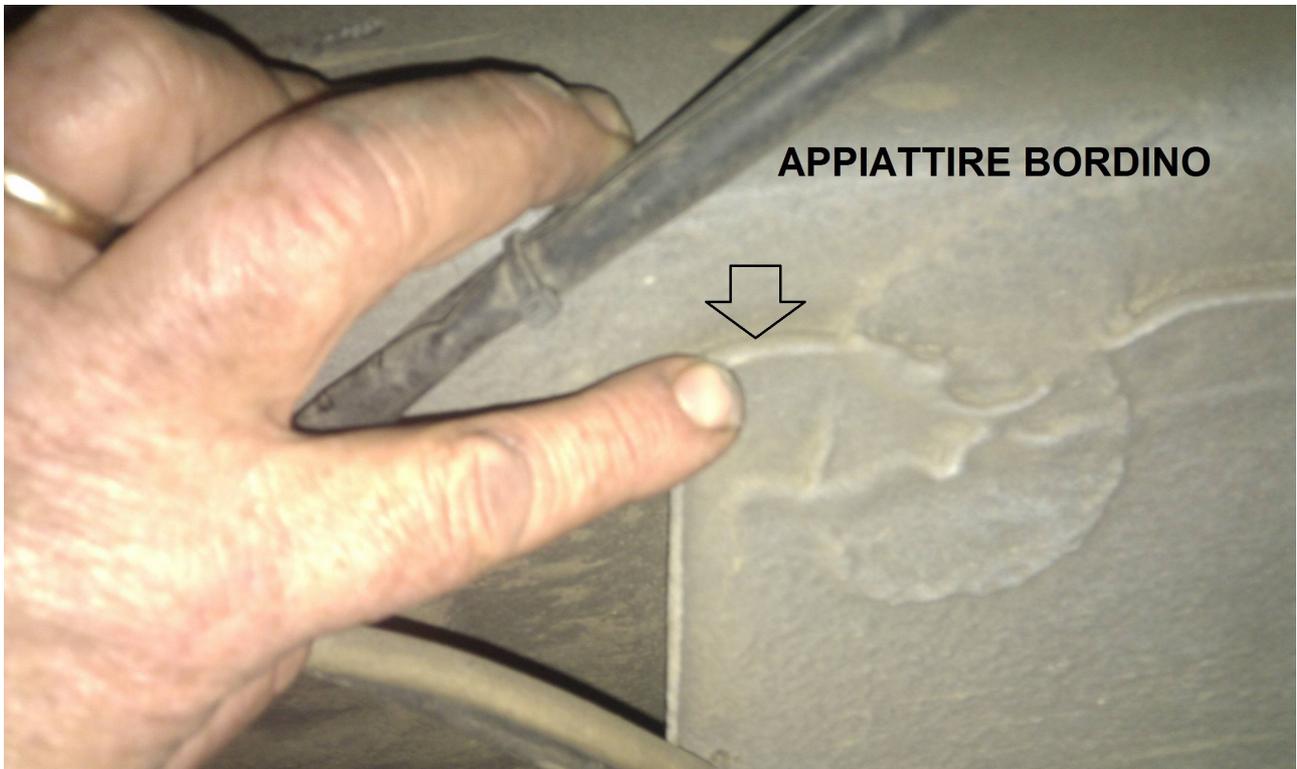


In rare cases it might be necessary to grind or flatten the edge indicated

**JACK WITH ENGINE EXTERNAL AND ROTATION FRONT**

## Rear adapter Ducato 244



The adapter must be placed in front of the rear axle, in the points shown.

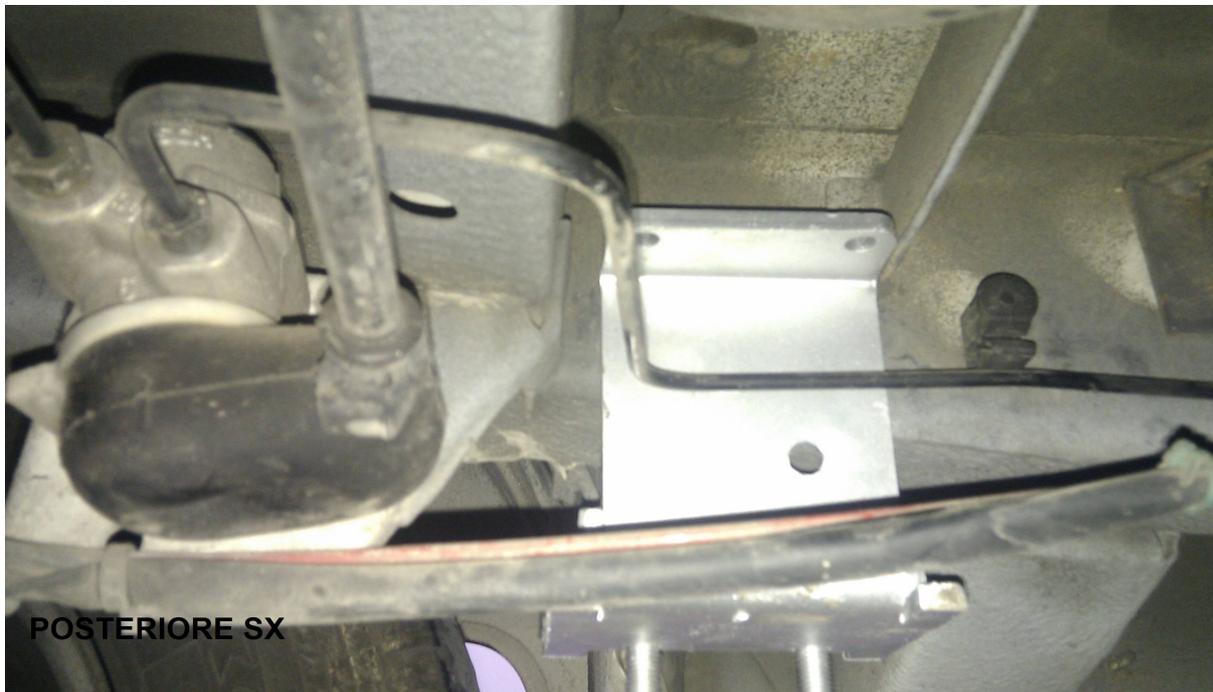

Insert the adapters then drill the 10mm holes (on both sides) – Then insert and fit the connection bar.



**BOTH JACKS MUST BE FIT WITH THE ENGINE REAR AND ROTATION INSIDE THE VEHICLE.**

