

AUTOLIFT SYSTEM

INSTALLATION MANUAL FOR UNIVERSAL ADAPTER

Please subscribe to our Youtube channel TESA AUTOLIFT SYSTEM and see all tutorial videos.

Universal Adapter

IMPORTANT


- Fix the adapter at 34cm minimum from the floor using the 10x30mm bolts.
- The adapters must be positioned and fixed perfectly specular.
- The jacks can be rotate front or rear.
- Then adjust the limit switches (see installation manual).

Universal Adapter (EXAMPLE 1)



Universal Adapter (EXAMPLE 2)

UNIVERSAL ADAPTER ON AL-KO CHASSIS, FIXING ESTERNAL BUT WITH A LITTLE CUSTOMIZING

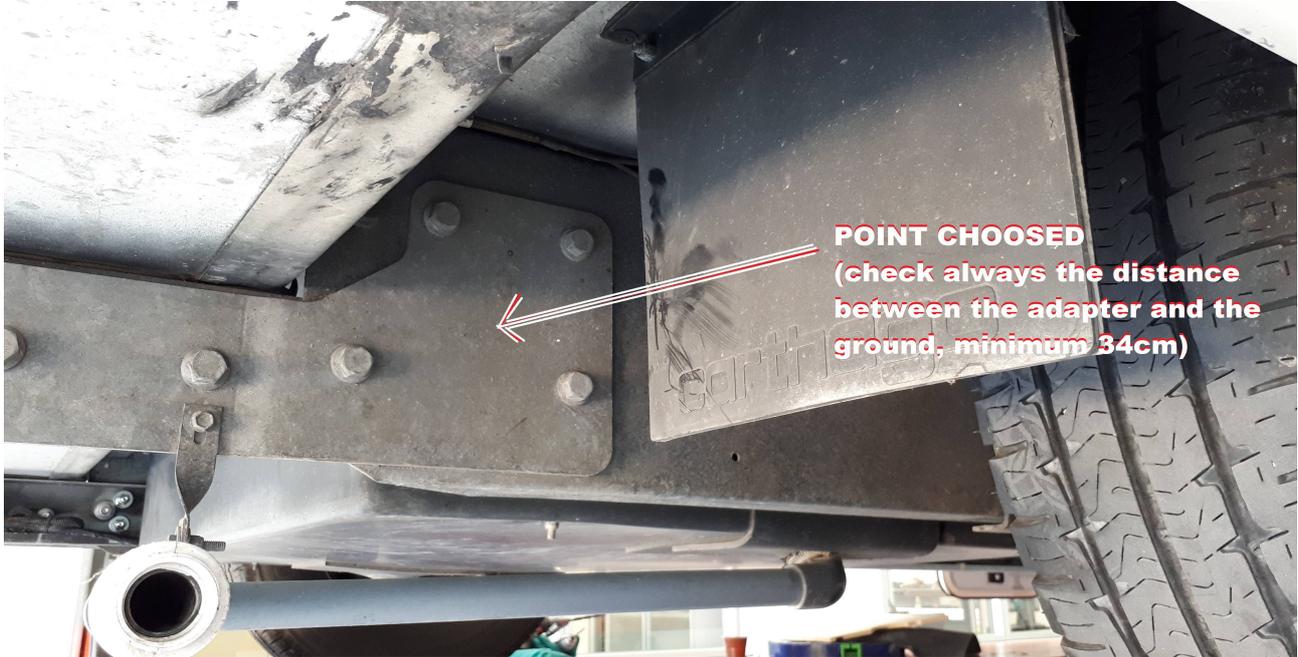

EXAMPLE OF CUSTOMIZED UNIVERSAL ADAPTER



Universal Adapter (EXAMPLE 3)

EXAMPLE OF UNIVERSAL ADAPTER WITH ONLY 2 HOLES MADE ON THE CHASSIS BECAUSE THERE WERE SOME HOLES UNUSED AND IT WAS POSSIBLE TO USE BY DOING TWO NEW HOLES ON THE ADAPTER



NEW HOLES ON THE ADAPTER